

Outdoor Wireless Night Vision Camera (ADC-721W)

Required Items for Installation:

- ADC-V721W camera and power adapter (included)
- Broadband (Cable, DSL, or Fiber Optic) Internet connection with Wi-Fi router
- A Wi-Fi enabled Computer, tablet or smartphone
- Login/Password for the customer's Alarm.com account
- If the router does not have a WPS button, and the camera will be connected to a wireless network, you will need the case-sensitive SSID (wireless network name) and the network WEP or WPA key (if encryption is enabled at the router)



For install help go to: Alarm.com/721Help

Install the Camera(s):

- 1. Connect the camera's AC adapter and plug it into a nonswitched outlet.
- From a computer or smartphone, connect to the Wi-Fi network named "ALARM (##:##:##)." The numbers in parentheses will be last 6 digits of camera's MAC
- 3. From a web browser type in "http://ADCsetup" and press enter.
- This should direct you to the camera's internal configuration website. Follow the on-screen instructions to connect the camera onto a wireless network.
- 5. From a computer on the same network as the camera, login to the customer's account at www.alarm.com/login.
- 6. Type **www.alarm.com/addcamera** into the web browser's address bar and follow the on-screen instructions to add the camera to the Alarm.com account.

	LED Status	Description
Install	All off	Power off
	Solid Red	Power on, system booting
	Green blink every second	Local network connection with local IP address
	Solid Green	Full internet connection with Alarm.com IP
	Blinking Blue	WPS learn-in mode
	Blinking White	Wi-Fi access point mode
Trouble Conditions	Solid Red No local or Internet	t connection

	Red blink every	
Factory Reset	0.15 second +	Restoring factory default settings
	Green blink	
	every 0.15	
	second	

Contact Alarm.com Dealer Support at support@alarm.com or find your local number **Questions?** at the following website http://alarmadmin.alarm.com/Support/Phone.aspx US and Canada: 1.866.834.0470 | MX: 001.855.300.9897

EZ.INSTALL[™]



Cámara inalámbrica con visión nocturna para exteriores (ADC-721W)

Elementos requeridos para la instalación:

- Cámara ADC-V721W y adaptador de corriente (incluidos)
- Conexión a internet a través de banda ancha (cable, DSL, o fibra óptica) con enrutador
- Computadora, tableta o smartphone habilitado para Wi-Fi
- Nombre de usuario y contraseña de la cuenta de usuario de Alarm.com
- Si el enrutador no tiene botón WPS y la cámara va a estar conectada a una red inalámbrica, necesitará el SSID (nombre de red inalámbrica) sensible a mayúsculas y minúsculas, y la clave correspondiente WEP o WPA de la red (si la encriptación está activada en el enrutador)

Si necesita ayuda, visite: Alarm.com/721Help

Instale la(s) cámara(s):

- 1. Conecte el adaptador de CA de la cámara y enchúfelo a una toma corriente no conmutada.
- Desde una computadora o smartphone, conéctese a la red Wi-Fi "ALARM (##:##:##)". Los números entre paréntesis son los últimos 6 dígitos del número MAC de la cámara.
- Desde un navegador, ingrese "http://ADCSetup" y pulse la tecla "Entrar".
- Será dirigido al sitio web de configuración interna de la cámara. Siga las instrucciones en pantalla para conectar la cámara a una red inalámbrica.
- Desde una computadora en la misma red que la cámara, inicie sesión en la cuenta de usuario en www.alarm.com/login.
- Ingrese <u>www.alarm.com/addcamera</u> en la barra de direcciones del navegador web y siga las instrucciones en pantalla para agregar la cámara a la cuenta de Alarm.com.



Todo apagado Cámara apagada	
Rojo constante Cámara encendida, iniciando sistema	
Verde intermitente Conexión a red local (parpadeando una dirección IP local vez por segundo)	con
Verde constante Conexión a internet o IP de Alarm.com	con
Azul intermitente Modo de aprendizaje WPS	į
Blanco Cámara en modo "Pu intermitente de acceso Wi-Fi"	into



Reajuste de fábrica

Instalación

Rojo constante No hay conexión local o a internet

Rojo

parpadeando cada 0.15 segundos + Verde parpadeando cada 0.15 segundos

Restableciendo la configuración de fábrica

¿Preguntas? Contacte a nuestro equipo de Soporte a Dealers a través de soporte@alarm.com o encuentre su número local en la página web http://alarmadmin.alarm.com/Support/Phone.aspx

EZ.INSTALL[™]